


ARENACOB4HALO

DMX CONTROL

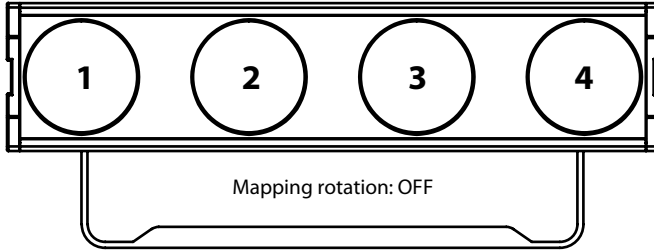

HALO 1ch		
MODE 1 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255

In HALO mode, the fixture emulates dimmer curve and color as an halogen DWE.

HALO 4ch		
MODE 4 Ch	FUNCTION	DMX Value
1	PIXEL 1 Dimmer 0~100%	000 - 255
2	PIXEL 2 Dimmer 0~100%	000 - 255
3	PIXEL 3 Dimmer 0~100%	000 - 255
4	PIXEL 14 Dimmer 0~100%	000 - 255

STANDARD - STD 2ch		
MODE STD 2 Ch	FUNCTION	DMX Value
1	WHITE 0~100%	000 - 255
2	AMBER SHIFT OFF ON	000 - 127 128 - 255

STANDARD - STD 4ch		
MODE STD 4 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	WHITE 0~100%	000 - 255
3	AMBER SHIFT OFF ON	000 - 127 128 - 255
4	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255

ARENACOB4HALO

STANDARD - STD 7ch		
MODE STD 7 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	WHITE 0~100%	000 - 255
3	AMBER SHIFT OFF ON	000 - 127 128 - 255
4	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
5	Halo DWE Dimmer 0~100% DYNAMIC PATTERNS No Function Pattern 1 Pattern 2 Pattern 3 Pattern 4 Pattern 5 Pattern 6 Pattern 7 Pattern 8 Pattern 9 Pattern 10 Pattern 11 Pattern 12 Pattern 13 Pattern 14 Pattern 15 Pattern 16 Pattern 17 Pattern 18 Pattern 19 Pattern 20 Pattern 21 Pattern 22 Pattern 23 Random Pattern	000 - 255 000 - 010 011 - 020 021 - 030 031 - 040 041 - 050 051 - 060 061 - 070 071 - 080 081 - 090 091 - 100 101 - 110 111 - 120 121 - 130 131 - 140 141 - 150 151 - 160 161 - 170 171 - 180 181 - 190 191 - 200 201 - 210 211 - 220 221 - 230 231 - 240 241 - 255

6	PATTERNS SPEED Static indexing Speed slow to fast TBD / Not used	000 - 029 030 - 140 141 - 255
7	DIMMER FADE Preset dimmer speed from display menu Dimmer curve Fast to Slow	000 - 000 001 - 255

EXTENDED - EXT 6ch			
MODE EXT 6 Ch	FUNCTION		DMX Value
1	DIMMER 0~100%		000 - 255
2	PIXEL1	WHITE 0~100%	000 - 255
3	PIXEL2	WHITE 0~100%	000 - 255
4	PIXEL3	WHITE 0~100%	000 - 255
5	PIXEL4	WHITE 0~100%	000 - 255
6	AMBER SHIFT OFF ON		000 - 127 128 - 255

ARENACOB4HALO

EXTENDED - EXT 8ch		
MODE EXT 8 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	PIXEL1 WHITE 0~100%	000 - 255
3	PIXEL2 WHITE 0~100%	000 - 255
4	PIXEL3 WHITE 0~100%	000 - 255
5	PIXEL4 WHITE 0~100%	000 - 255
6	AMBER SHIFT OFF ON	000 - 127 128 - 255
7	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
8	DIMMER FADE Preset dimmer speed from display menu Dimmer curve Fast to Slow	000 - 000 001 - 255

EXTENDED - EXT 10ch		
MODE EXT 10 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	PIXEL1 WHITE 0~100%	000 - 255
3	PIXEL2 WHITE 0~100%	000 - 255
4	PIXEL3 WHITE 0~100%	000 - 255
5	PIXEL4 WHITE 0~100%	000 - 255
6	AMBER SHIFT OFF ON	000 - 127 128 - 255

7	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
8	DIMMER FADE Preset dimmer speed from display menu Dimmer curve Fast to Slow	000 - 000 001 - 255
9	DYNAMIC PATTERNS No Function Pattern 1 Pattern 2 Pattern 3 Pattern 4 Pattern 5 Pattern 6 Pattern 7 Pattern 8 Pattern 9 Pattern 10 Pattern 11 Pattern 12 Pattern 13 Pattern 14 Pattern 15 Pattern 16 Pattern 17 Pattern 18 Pattern 19 Pattern 20 Pattern 21 Pattern 22 Pattern 23 Random FX	000 - 010 011 - 020 021 - 030 031 - 040 041 - 050 051 - 060 061 - 070 071 - 080 081 - 090 091 - 100 101 - 110 111 - 120 121 - 130 131 - 140 141 - 150 151 - 160 161 - 170 171 - 180 181 - 190 191 - 200 201 - 210 211 - 220 221 - 230 231 - 240 241 - 255
10	PATTERNS SPEED Static indexing Speed slow to fast TBD / Not used	000 - 029 030 - 140 141 - 255