Quick Start Guide

Chroma-Q[®] Inspire XT[™] Terminal Strip, Inspire[™] Terminal Strip, Inspire Mini[™] Terminal Strip





For a full product manual please visit https://chroma-q.com Part Number: CHINHLRGBWXT, CHINHLRGBWXTW, CHINHLRGBW32E, CHINHLRGBW42E, CHINHLRGBW65E, CHINHLW32E, CHINHLW42E, CHINHLW65E, CHINMINIHLRGBW7, CHINMINIHLRGBW7W Model: 632-8220, 632-8221, 632-1500, 632-1600, 632-1700, 632-2500, 632-2600, 632-2700, 632-6500, 632-6505 Software Version (Engine) 2.2

1. Overview

The Chroma-Q[™] Inspire[™] Terminal Strip LED house light features a single light engine with high powered LEDs (RGBW), a fully homogenized optic and controlled via the Inspire[™] External Control Box. Through the Inspire External Control Box, the fixture can be controlled remotely through the ANSI E1.11 USITT DMX 512-A protocol.


2. Safety

1. This product is for professional use only. It is NOT intended for domestic or outdoor use.

Caution


- **2.** The bright flash of light during power-up and continuous strobe effect may cause epileptic seizure.
 - 3. This product must be used with safety cable.

3. Cabling

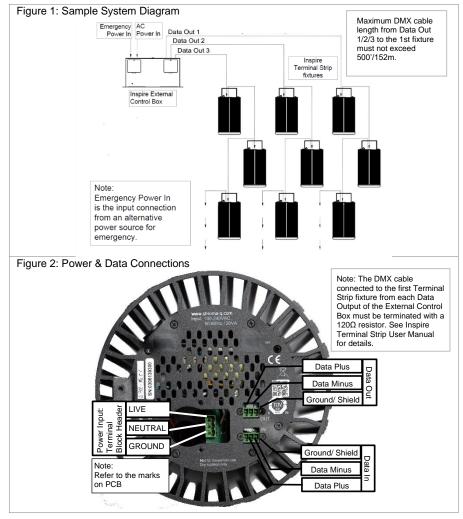


To connect the wiring for power and control data:

• The Power Input Connector Box (figure 3) is supplied with the fixture and is not attached. It must be mounted as described in the following steps

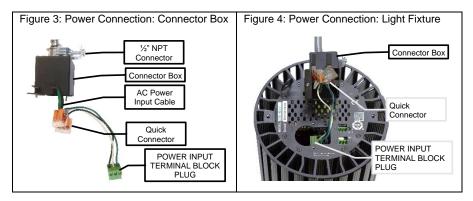

• Insert the power cable with the appropriate ½" NPT Connector or Cable Strain Relief through the Connector Box (Figure 3). The hole on the connector box has a Suitable dimension to attach a ½" NPT connector on it. The Power Input Terminal Block Plug has three soft wires attached to it. Attach the provided wires to the wiring for the AC power input with Quick Connectors or Marret Connectors (Figure 3).


• Put the Quick / Marret Connectors inside the Connector Box. Plug the wired Terminal Block Plug into the Power Input Terminal Block Header (Figure 4).

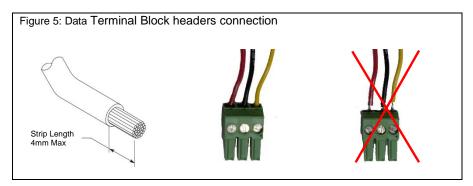

• Connect the DMX control data cables from the Inspire External Control Box / another Inspire Light Fixture to the Terminal Block Plug. Ensure that the bare wire is not visible. Some insulation of the wire must be inside the hole. The maximum strip length is 4 mm (Figure 5). Plug Terminal Block Plug into the Terminal Block headers at the rear of the fixture (Figure 2 & 5).



• Put the Connector Box in place and fasten the Connector Box with capacitive screw.

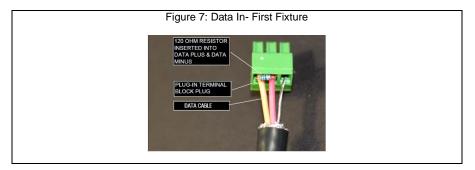

Notes:

• **IMPORTANT**: Termination resistors (supplied with the External Control Box) are REQUIRED on first fixture in each data run (Figure 5) – see User Manuals for more details.

- For DMX & data wires use Belden 9729 or CAT5e/6.
- Max. cable distance from DATA OUT to first fixture must not exceed 152m/500 ft.
- * Emergency Power is shown as an example only and may not be used on all projects.

4. Mounting

A mounting bracket is built into the enclosure for overhead applications. Secure the fixture with a safety bond. A fixing hold is built into the enclosure. Optional accessories are also available for mounting Inspire light fixtures.

5. Optics

The Inspire XT is provided with a lens that delivers a beam angle of approximately 32°. Using a lens from the included Spread Lens kit will increase the beam to approximately 42° or 65°. For lens installation details, consult the instruction included with the kit.

The Inspire Terminal Strip can be built with either Narrow, Medium or Wide lens. The beam angles are: Narrow: $\sim 32^{\circ}$; Medium: $\sim 42^{\circ}$; Wide: $\sim 65^{\circ}$.

The Inspire Mini Terminal Strip is built with wide lens with a beam angle of approximately ~65°.

The Optional Spreader Lens Kit is available for changing the beam angle of any Inspire Light Fixture.

6. Control

The control functions are accessed through the Touch Screen display at the front panel of the Inspire External Control Box. The features of the Touch Screen Display are shown in Figure 8.

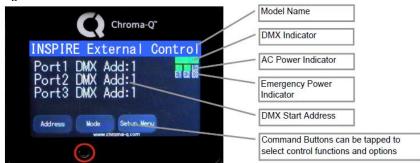


Figure 8: Main screen of the External Control Box

7. Further Information

Please refer to the Chroma-Q Inspire[™] manual for more detailed information. A copy of the manual can be found at the Chroma-Q website – <u>https://chroma-g.com/support/downloads</u>

Approvals & Disclaimer

CE

The information contained herein is offered in good faith and is believed to be accurate. However, because conditions and methods of use of our products are beyond our control, this information should not be used in substitution for customer's tests to ensure that Chroma-Q products are safe, effective, and fully satisfactory for the intended end use. Suggestions of use shall not be taken as inducements to infringe any patent. Chroma-Q sole warranty is that the product will meet the Chroma-Q sales specifications in effect at the time of shipment. Your exclusive remedy for breach of such warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted.

Chroma-Q reserves the right to change or make alteration to devices and their functionality without notice due to on-going research and development.

The Chroma-Q Space Force has been designed specifically for the lighting industry. Regular maintenance should be performed to ensure that the products perform well in the entertainment environment.

If you experience any difficulties with any Chroma-Q products please contact your selling dealer. If your selling dealer is unable to help please contact support@chroma-q.com. If the selling dealer is unable to satisfy your servicing needs, please contact the following for full factory service:

Outside North America:	North America:
Tel: +44 (0)1494 446000	Tel: +1 416-255-9494
Fax: +44 (0)1494 461024	Fax: +1 416-255-3514
support@chroma-q.com	support@chroma-q.com

For further information please visit the Chroma-Q website at https://chroma-com.

Chroma-Q is a trademark, for more information on this visit https://chroma-q.com/trademarks.

The rights and ownership of all trademarks are recognized.